

perfecta

Alarm control panel

PERFECTA-IP 32

Firmware version 2.05

EN

CE



QUICK INSTALLATION GUIDE

perfecta-ip_32_sii_en 10/25

Satel®

SATEL sp. z o.o. • ul. Budowlanych 66 • 80-298 Gdańsk • POLAND
tel. +48 58 320 94 00
www.satel.pl

IMPORTANT

Full manual is available on www.satel.pl. Scan the QR code to go to our website and download the manual.



The security alarm system should be installed by qualified personnel.

Prior to installation, please read carefully this manual.

Changes, modifications or repairs not authorized by the manufacturer shall void your rights under the warranty.

SATEL aims to continually improve the quality of its products, which may result in changes in their technical specifications and software. Current information about the changes being introduced is available on our website.

Please visit us at:
<https://support.satel.pl>

The declaration of conformity may be consulted at www.satel.pl/ce

Signs in this manual



Caution – information on the safety of users, devices, etc.



Note – suggestion or additional information.

CONTENTS

1. Installation in short.....	2
2. Installing the control panel.....	2
2.1 Description of the mainboard	3
3. Installing the MICRA wireless system module.....	4
4. Connecting devices to the communication bus	5
4.1 Setting the device address.....	5
4.2 Connecting the keypads.....	6
4.2.1 Installing the PRF-LCD keypad	6
4.3 Connecting the 433 MHz keyfobs receiver expansion module.....	7
4.4 Connecting the hardwired zone expanders.....	7
4.5 Connecting the hardwired output expanders.....	8
5. Connecting detectors and other devices to the zones.....	9
6. Connecting the sirens.....	10
7. Connecting the Ethernet.....	10
8. Connecting the power and starting the control panel	10
8.1 Main power source.....	10
8.2 Backup power source.....	11
8.3 Control panel power-up / start-up procedure.....	11
8.4 Starting the service mode	12
8.5 Emergency procedure of the control panel start-up	12
8.6 First steps after starting-up the control panel	12
8.6.1 Control panel with wired keypads	12
8.6.2 Control panel without wired keypads	12
9. Programming addresses for the hardwired keypads	12
9.1 Programming the address by means of the service function.....	13
9.2 Programming the address without entering the service mode	13
10. Identifying devices	13
10.1 Identifying devices by means of the keypad.....	13
10.2 Identifying devices by means of the PERFECTA SOFT program.....	14
11. Connecting the computer to the control panel	14
12. Installing MICRA wireless devices.....	14

The manual contains basic information on the installation of PERFECTA-IP 32 control panel (model produced since October 2025). For more information, please refer to the full installation manual available at www.satel.pl.



Disconnect power before making any electrical connections.

1. Installation in short

Planning the alarm system

Place the devices that you want to install in the alarm system on the site plan.

Cabling

Run the 230 VAC power cable and the cables for connecting other devices (keypads, expansion modules, detectors and sirens) to the control panel installation place. To connect the devices, use an unshielded non-twisted cable.

Installing the control panel

Install the control panel in the enclosure. Run the cables inside the enclosure and secure the control panel enclosure to the wall using wall plugs (anchors) and screws.

Connecting the wires

Connect all the wires to the control panel: to the communication bus connect keypads and expansion modules, to the zones – detectors, to the outputs – sirens, to the power input – 40 VA transformer. Connect the transformer to 230 VAC power.

Turning on the power and starting the control panel

Connect the 12 V lead-acid battery to the control panel, then turn on the AC power.

Programming addresses for the hardwired keypads

Use the keypad to start the address programming function. If there is only one hardwired keypad in the system or only wireless keypads are to be used, you can skip this step.

Identifying devices connected to the control panel

Use the keypad or the PERFECTA SOFT program to identify the devices connected to the communication bus or the communication connector (PERFECTA-RF).

Installing MICRA wireless devices

Wireless devices can be installed if the PERFECTA-RF module is connected to the control panel.

Programming the alarm system

Use the keypad or the PERFECTA SOFT program to configure the alarm system settings.

Testing the alarm system

Test the system to make sure that all devices and functions operate correctly. You will find the system testing functions in the keypad user menu.

2. Installing the control panel



The control panel mainboard contains electronic components sensitive to electric charges.

Before connecting the mainboard to power source (battery, alternating voltage from transformer), you must first complete all the installation work with hardwired devices (connection of keypads, expansion modules, detectors etc.).

The control panel should be installed indoors, in spaces with normal air humidity. A 230 VAC power circuit with protective grounding must be available at the installation place. The control

panel must be protected against unauthorized access. It is recommended to install the control panel in a plastic enclosure.



Do not install the control panel in a metal enclosure if the PERFECTA-RF module is to be used or another radio device is to be installed in the control panel enclosure.

2.1 Description of the mainboard

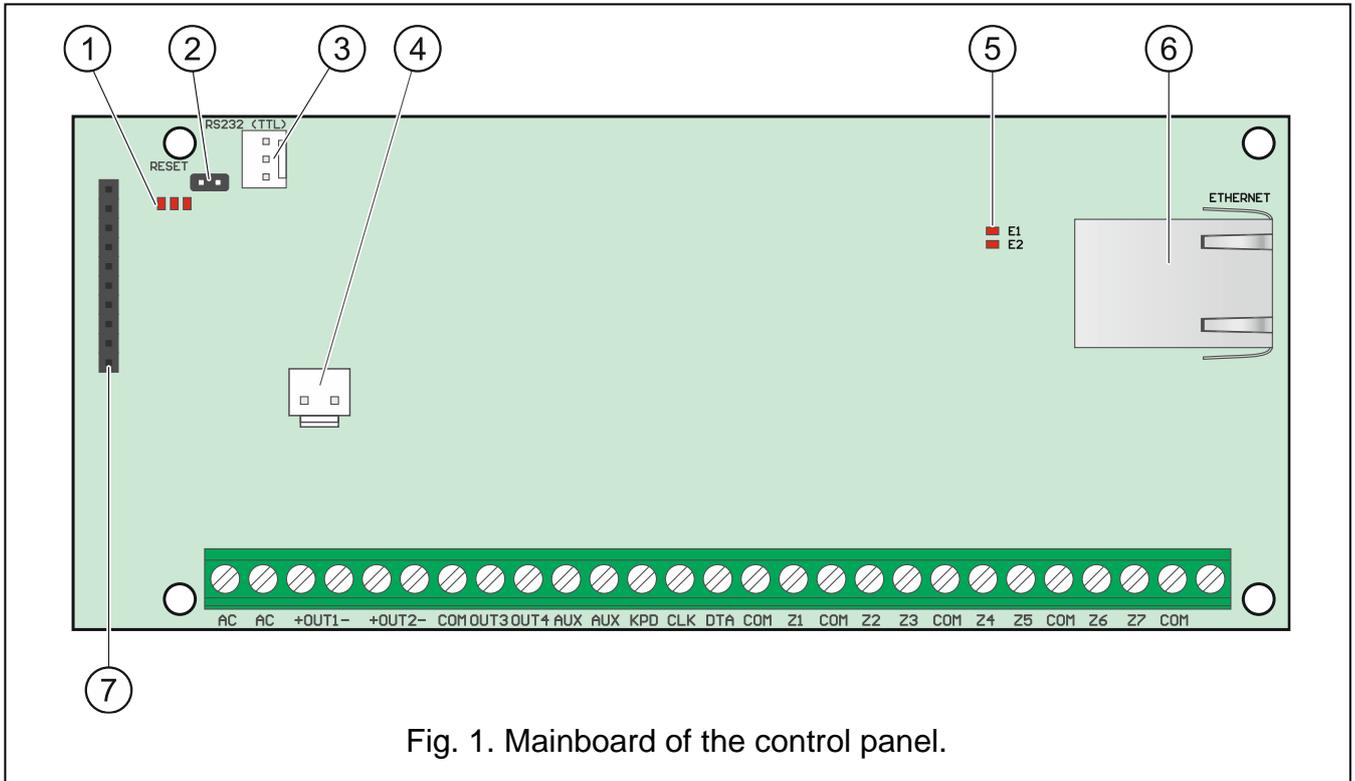


Fig. 1. Mainboard of the control panel.

- ① LED indicators:
left – not used.
center – ON when the battery is being tested.
right – not used.
- ② RESET pins for emergency starting the control panel (see: “Emergency procedure of the control panel start-up” p. 12).
- ③ RS-232 (TTL) port.
- ④ connector for battery connection wires. The wires are included in the set (Fig. 2).
- ⑤ LED indicators:
E1 – ON when the control panel is powered; flashing during network communication with the PERFECTA Soft program or the PERFECTA Control app.
E2 – not used.
- ⑥ RJ-45 port for connecting Ethernet.
- ⑦ communication connector for connecting the PERFECTA-RF module.

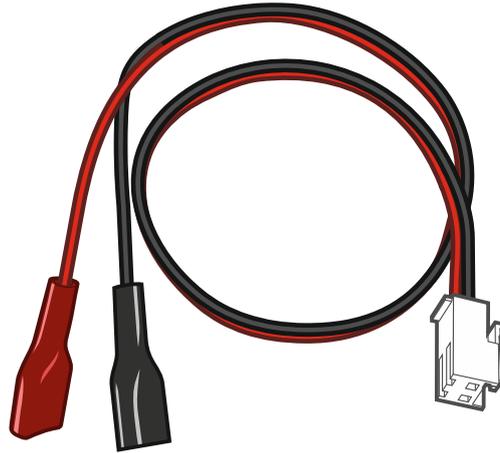


Fig. 2. Battery connection wires (red +, black -).

Description of terminals

- AC** - power input (18 VAC).
- +OUT1-, +OUT2-** - programmable high-current outputs. +12 VDC voltage is always present at the “+” terminal. The “-” terminal is either shorted to or disconnected from the common ground, depending on the output status (active/inactive) and polarity.
- OUT3, OUT4** - programmable low-current outputs, OC type (disconnected from common ground / shorted to common ground).
- COM** - common ground.
- AUX** - +12 VDC power output.
- KPD** - +12 VDC power output.
- DTA** - communication bus data.
- CLK** - communication bus clock.
- Z1...Z8** - zones.

3. Installing the MICRA wireless system module



If the PERFECTA-RF module is to be used, do not install the INT-RX-S expander. These devices cannot be used simultaneously.

Install the PERFECTA-RF module in the slot on the electronics board as shown in Figure 3.

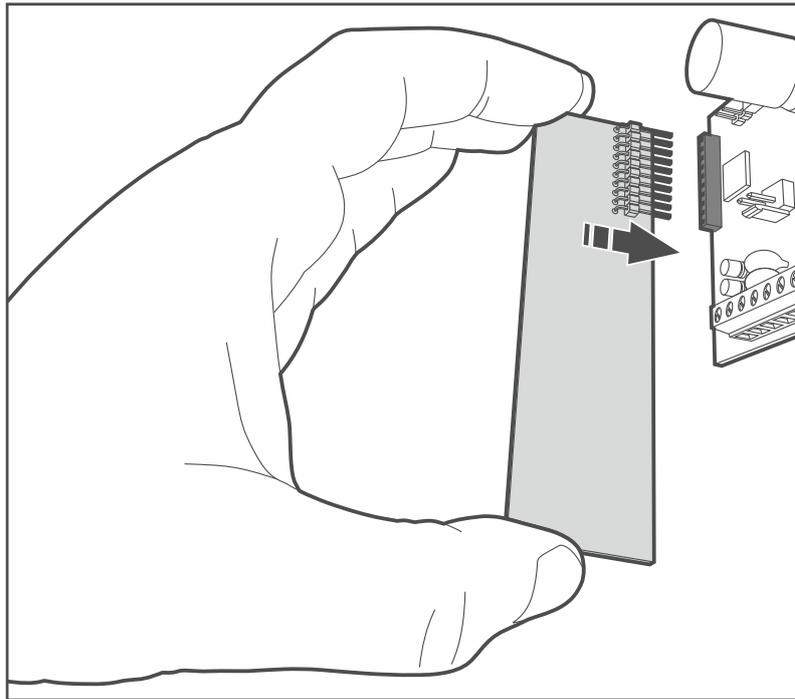


Fig. 3. Installing the PERFECTA-RF module.

4. Connecting devices to the communication bus



The bus wires must be run in one cable.

The distance between the device and the control panel may be up to 600 m.

The device can be powered directly from the control panel, if the distance to the control panel does not exceed 300 m. Where the distance is greater, another power source must be provided for the device (additional power supply).

4.1 Setting the device address

A suitable address must be set for a device connected to the communication bus. Two devices must not share the same address (otherwise their identification will be impossible). For most devices, use the DIP-switches to set the address. The switches have numbers assigned to them. In the OFF position, the number is 0. The numbers assigned to the switches in ON position are presented in the Table 1. The sum of these numbers is the address set.

Switch (ON position)	1	2	3	4	5
Number	1	2	4	8	16

Table 1.

For information on the requirements related to address setting, please refer to the sections describing how specific devices are to be connected.

4.2 Connecting the keypads

The control panel supports up to 4 keypads. These can be either wired or wireless keypads (the wireless ones can only be installed after starting the control panel). Addresses of the keypads must be set within the range from 0 to 3 (see “Programming addresses for the hardwired keypads” p. 12).

4.2.1 Installing the PRF-LCD keypad

The keypad is designed for indoor installation. The place of installation should be readily accessible to the system users.

1. Open the keypad enclosure (Fig. 4).


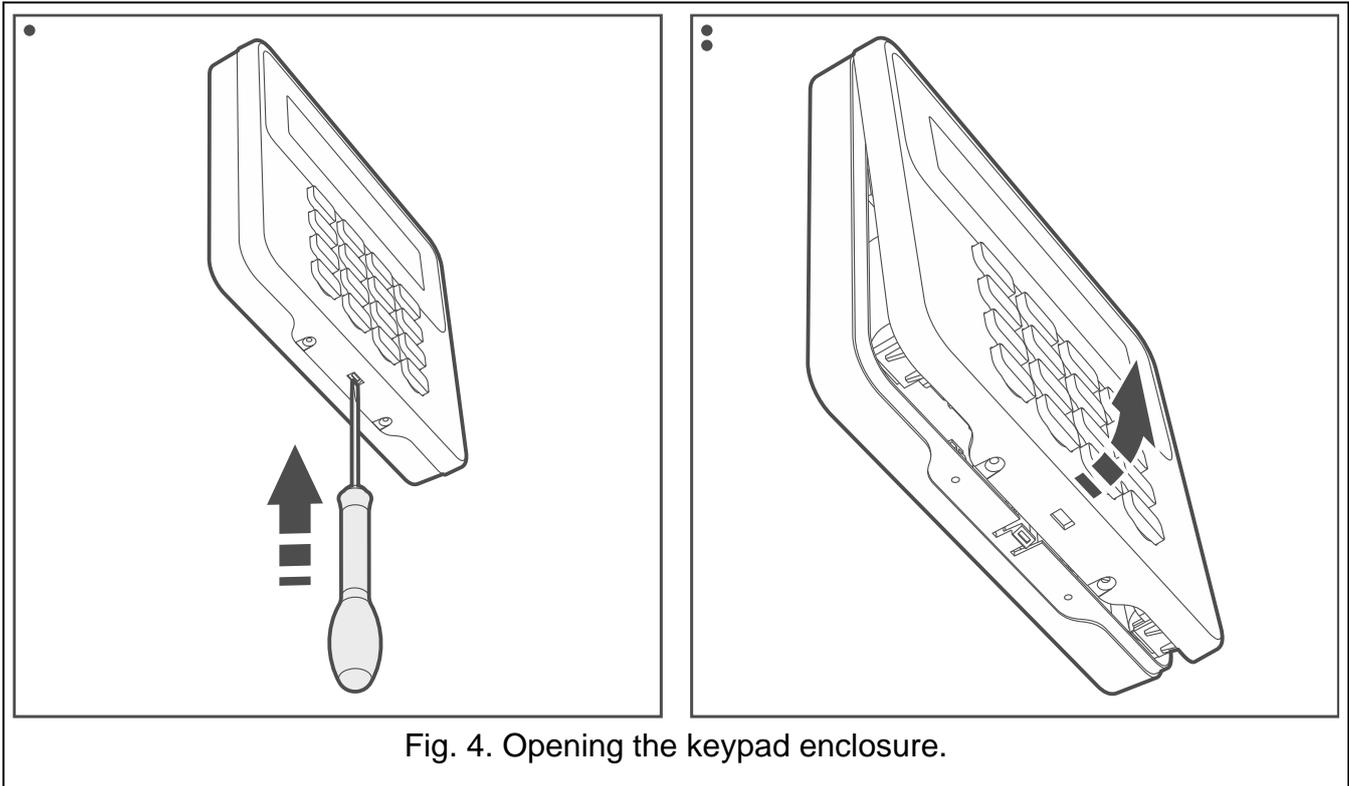


Fig. 4. Opening the keypad enclosure.

2. Place the enclosure base against the wall and mark location of the mounting holes.
3. Drill the holes in the wall for wall plugs (anchors).
4. Run wires through the opening in the enclosure base.
5. Using wall plugs (anchors) and screws, secure the enclosure base to the wall. Select wall plugs specifically intended for the mounting surface (different for concrete or brick wall, different for plaster wall, etc.).
6. Screw the wires to the keypad terminals (Fig. 5).
7. Put the cover on the catches and snap the enclosure shut.
8. Lock the cover with screws.




4.3 Connecting the 433 MHz keyfobs receiver expansion module

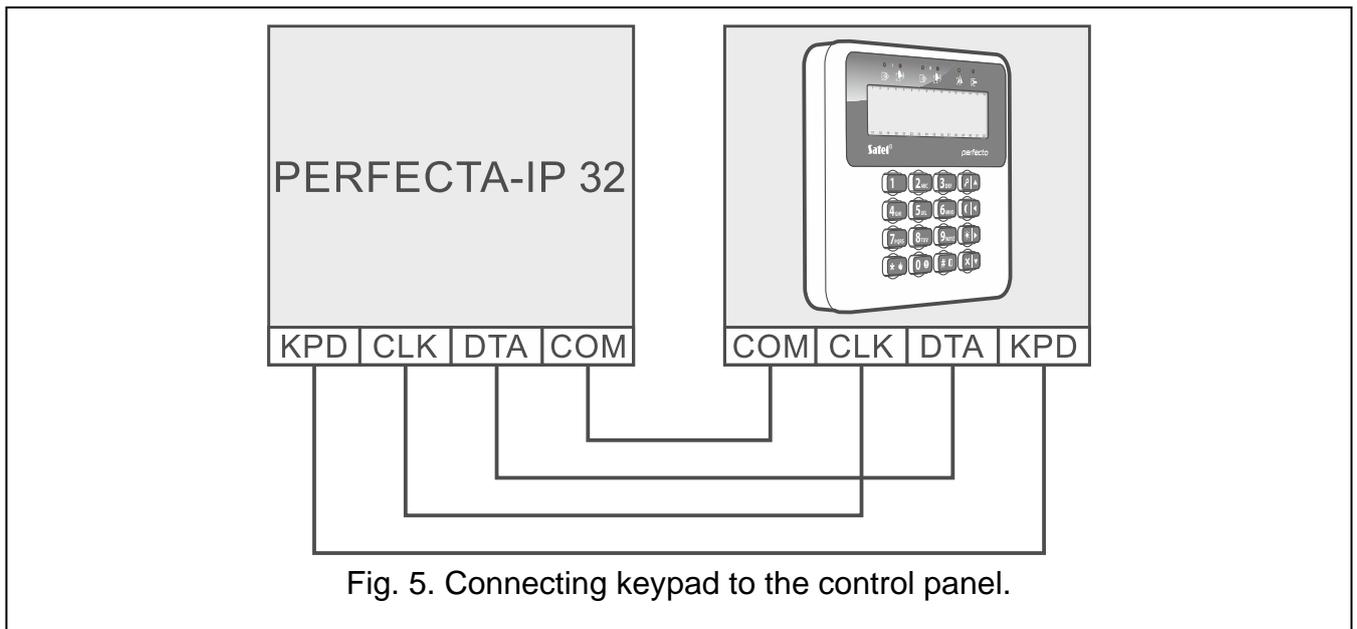

If the INT-RX-S expander is to be used, do not install the PERFECTA-RF module. These devices cannot be used simultaneously.

You can connect one 433 MHz keyfobs receiver expansion module to the control panel. Set address 7 (07h) in the module. See: “Setting the device address” (p. 5).

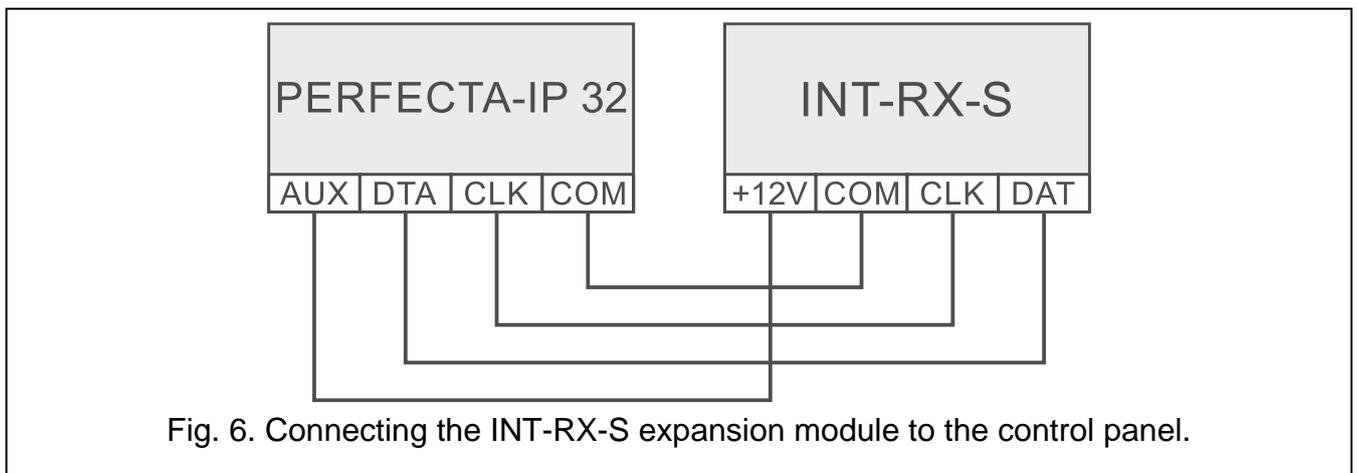


4.4 Connecting the hardwired zone expanders

You can connect up to 3 zone expanders to the control panel.

Set address 12 (0Ch), 13 (0Dh) or 14 (0Eh) in the expander. See: “Setting the device address” (p. 5).

The DIP-switch 10 must be set in the OFF position.

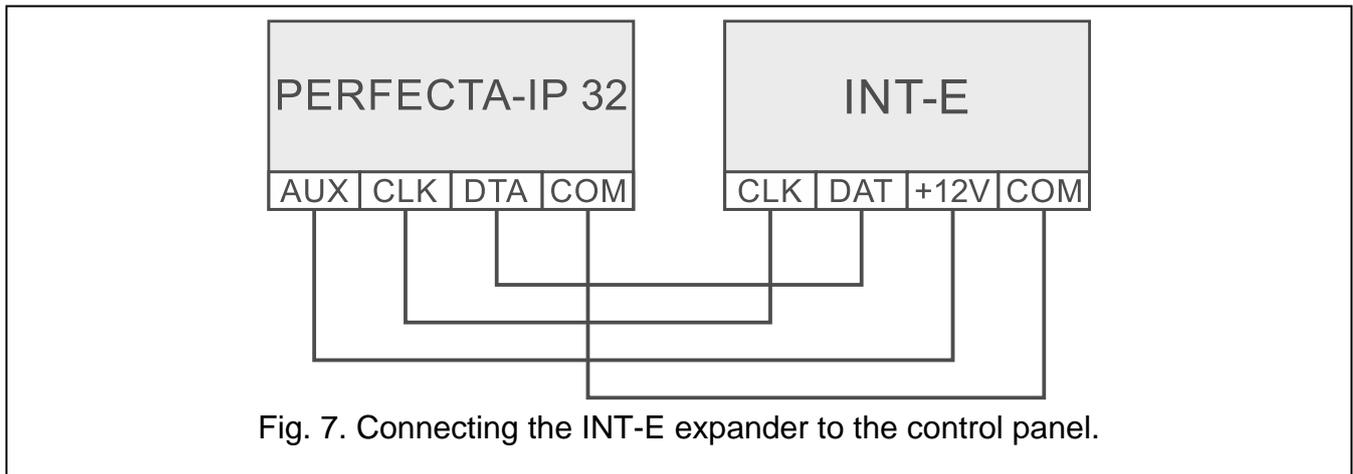

The INT-E expander will be identified as:

INT-E – power supply by SATEL is not connected to the expander connector,


INT-EPS – power supply by SATEL is connected to the expander connector.

4.5 Connecting the hardwired output expanders

You can connect 1 output expander to the control panel. Set address 15 (0Fh) in the expander. See: “Setting the device address” (p. 5). Additionally, in the INT-ORS expander:

10-position DIP-switch: set switch 6 in OFF position and switch 10 in ON position,

6-position DIP-switch: set switch 6 in OFF position.

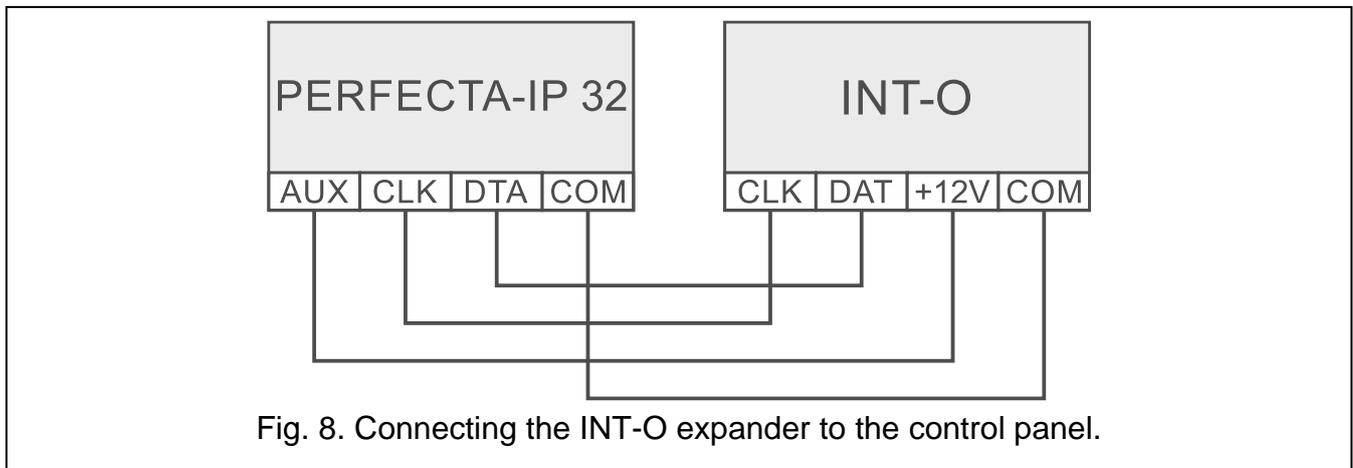


The INT-O / INT-ORS expander will be identified as:

INT-O – power supply by SATEL is not connected to the expander connector,

INT-OPS – power supply by SATEL is connected to the expander connector.

5. Connecting detectors and other devices to the zones

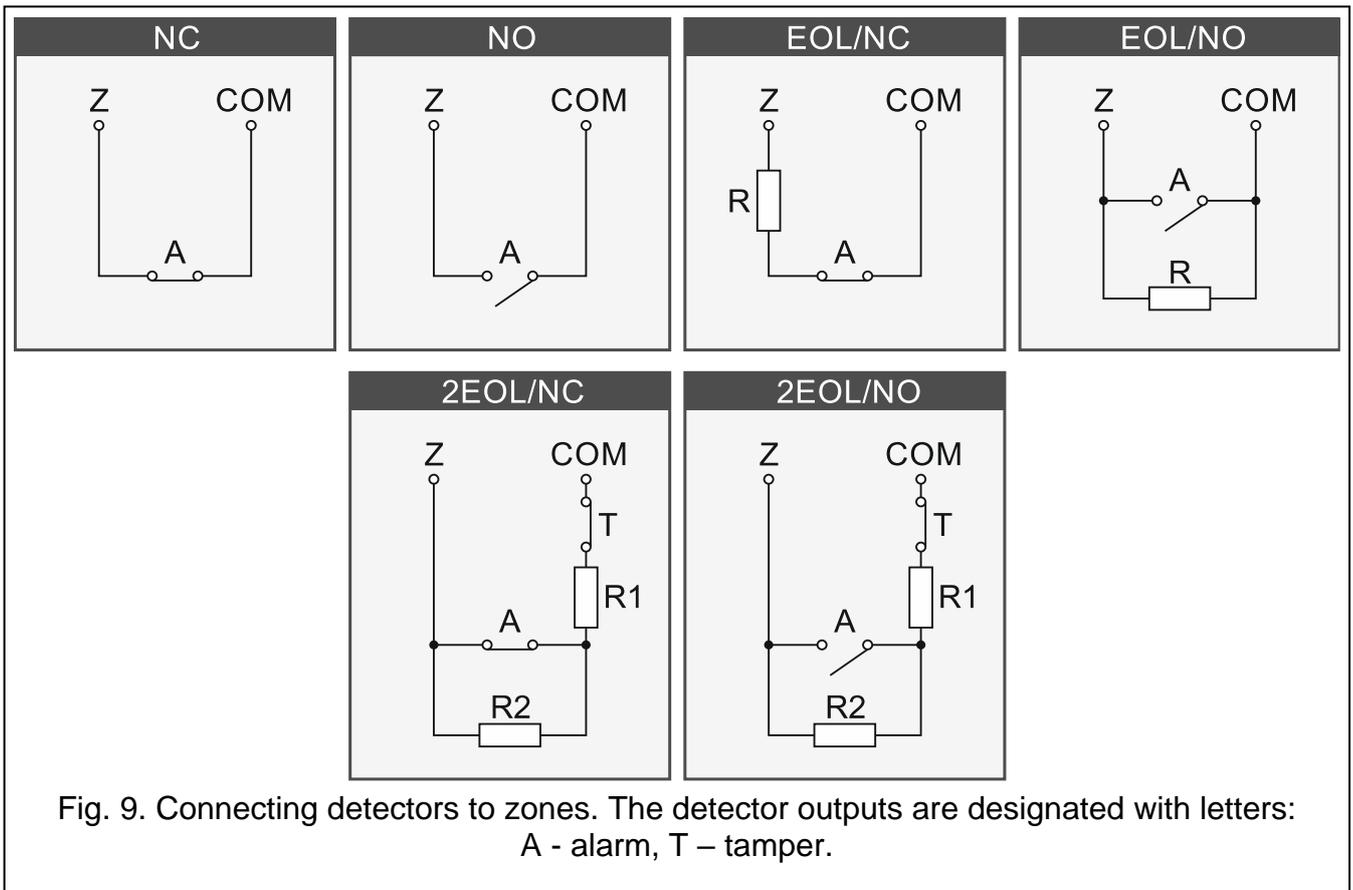

Zones of the control panel support the following wiring configurations:

NC – for connecting a detector with NC (normally closed) alarm output. Opening the circuit will trigger an alarm.

NO – for connecting a detector with NO (normally open) alarm output. Closing the circuit will trigger an alarm.

EOL – for connecting a detector with NC or NO alarm outputs. An EOL resistor must be used in the circuit. Alarm will be triggered by closing or opening the circuit.

2EOL/NC – for connecting a detector with NC alarm output and tamper output. Two EOL resistors must be used in the circuit. The zone can distinguish between 3 states: normal, alarm and tamper.

2EOL/NO – wiring configuration similar as 2EOL/NC, but for detectors with the NO alarm output.

Roller – for connecting a roller shutter detector.

Vibration – for connecting a shock detector. You can also connect to the zone a detector with NC alarm output (e.g. shock detector and magnetic contact can be connected in series).

End-of-line resistors


The value of EOL resistors is programmable. According to the factory settings, depending on the wiring type:

- EOL – use one 2.2 k Ω resistor,
- 2EOL – use two 1.1 k Ω resistors.

6. Connecting the sirens



It is recommended that the control panel be started without connected sirens. This will prevent accidental triggering of the signaling after the control panel is started.

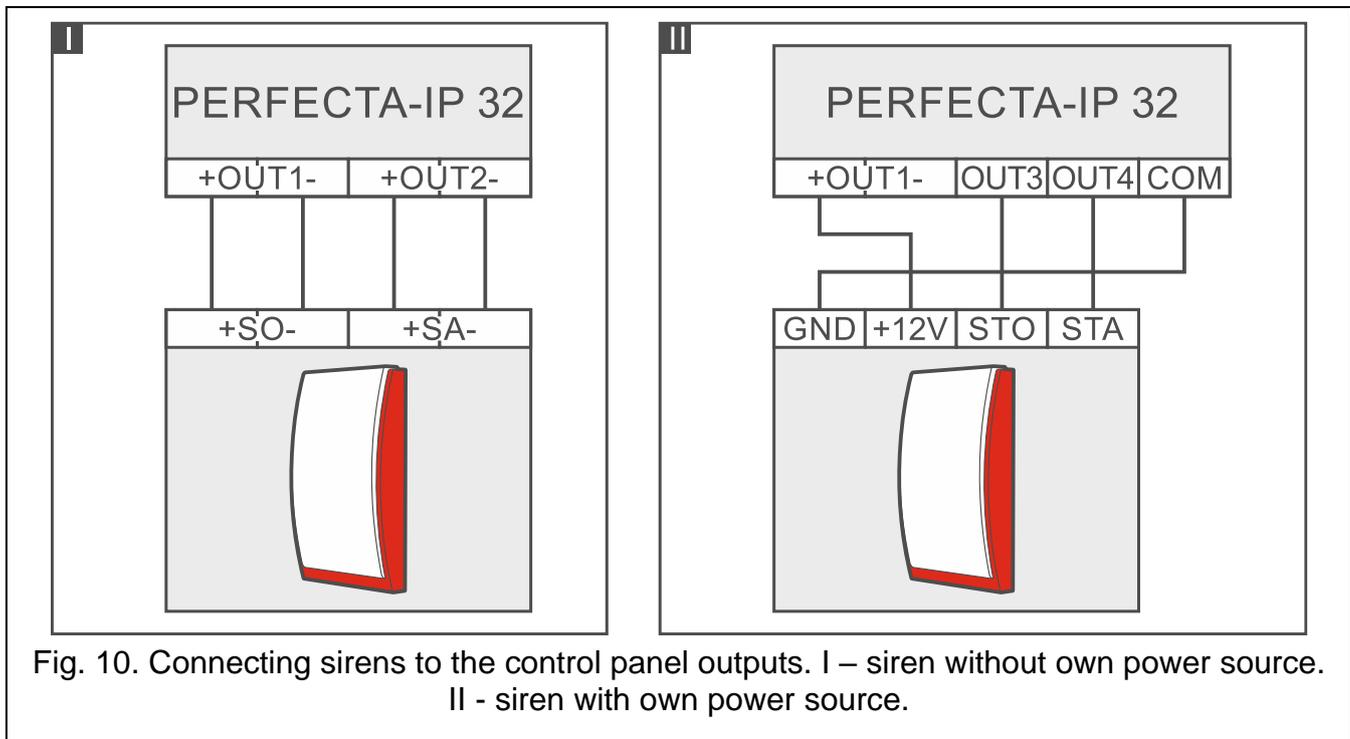

Depending on the siren type:

- sirens without own power source (e.g. SP-500, SP-4001, SP-4003, SPL-2010, SPW-100, SPW-210, SPW-220) – high-current outputs are to be used to trigger the signaling,
- sirens with own power source (e.g. SP-4002, SP-4004, SP-4006, SP-6500, SPLZ-1011, SD-3001, SD-6000) – it is recommended to use low-current outputs to trigger the signaling, and high-current ones – to supply power.

7. Connecting the Ethernet



The device is designed to be used only in the local area networks (LAN). It must not be connected directly to the public computer network (MAN, WAN). For establishing connection with public networks, use a router or xDSL modem.

To connect the control panel to the Ethernet network, use a 100Base-TX standard compliant cable (identical to that used for connecting computers to the network). The cable must be terminated with a RJ-45 plug.

8. Connecting the power and starting the control panel



Do not connect power until all installation operations are completed.

8.1 Main power source

The control panel requires 18 VAC ($\pm 10\%$) power. It is recommended that a transformer with 40 VA rating be used.

The transformer should be permanently connected to the 230 VAC mains power. The electrical circuit to which the transformer is to be connected must have suitable protection (2-pole switch disconnecter and/or 16 A slow-blow fuse). Instruct the owner / user of the system on how to disconnect the transformer from the mains supply (e.g. indicate the fuse or circuit breaker protecting the transformer supply circuit).



Do not connect two devices with power supply to one-section transformer.

Before connecting transformer to a circuit from which it will be powered, make sure the circuit is de-energized.

8.2 Backup power source

For a backup power source, use a 12 V sealed lead-acid battery or other 12 V battery with similar charging characteristics. The battery capacity must be selected to match current consumption in the system. If the system is to meet the requirements of the EN 50131 standard for Grade 2, the battery must ensure operation of the system without mains power for 12 hours.

If the battery voltage drops below 11 V for longer than 12 minutes (3 battery tests), the control panel will indicate battery failure. When the voltage goes down to approx. 10.5 V, the battery will be disconnected.



Do not connect deeply discharged battery to the control panel (with voltage across unloaded terminals below 11 V). The battery should be precharged with a proper charger.

The used batteries must not be discarded, but should be disposed of in accordance with the existing rules for environment protection.

8.3 Control panel power-up / start-up procedure

1. De-energize the 230 VAC circuit to which the transformer is to be connected.
2. Connect the 230 VAC wires to the terminals of transformer primary winding.
3. Connect the terminals of transformer secondary winding to the control panel AC terminals. To make the connection, use flexible wires with a cross-section of 0.5-0.75 mm².
4. Connect the battery wires (Fig. 2) to the connector on the electronics board.
5. Connect the battery to the dedicated wires (positive terminal to red wire, negative terminal to black wire). If the battery has screw-type cable lugs, use adapters delivered with the control panel (do not cut off the battery cable lugs). **The control panel will not start after connecting the battery alone.**
6. Turn on 230 VAC power in the circuit to which the transformer is connected. The control panel will start operating.



The above mentioned power-up sequence (first the battery, then the 230 VAC mains) will ensure proper operation of the power supply and the electronic protection circuits, thus preventing damage to the alarm system components caused by installation mistakes, if any.

If it is necessary to de-energize the control panel, turn off the main power (AC) first, and the backup power (battery) afterwards. Observe the above described procedure when reconnecting the power.

8.4 Starting the service mode

If, after starting the alarm control panel, you want to perform any operations that do not require power-off (e.g. to adjust sensitivity in wired detectors), enter the service mode.



When the control panel is running in service mode, tamper alarms are not generated.

1. Enter the **service code** (by default: 12345) and press .
2. User menu will be displayed.
3. Press .
4. When the  cursor shows the SERVICE MODE function, press .
5. Service mode menu will be displayed (the  cursor will show the END SM function).

8.5 Emergency procedure of the control panel start-up

If the control panel fails to start properly, keypads are not supported, codes are not accepted by the control panel etc., despite all connections having been made correctly, follow the steps below:

1. Power off the control panel (disconnect AC mains first, and the battery next).
2. Place a jumper across the RESET pins.
3. Power up the control panel (first connect the battery and then the AC power).
4. Wait a few seconds (until LEDs next to the RESET pins stop flashing) and remove the jumper from the RESET pins. The control panel will enter the service mode. The service mode menu will be displayed on the wired keypad with the lowest address.



If there is no wired keypad in the alarm system or there is no communication with the wired keypads (e.g. when the communication bus is shorted), you can get access to the service mode menu from the wireless keypad with the lowest address. Press any key on this keypad within 30 seconds of removing jumper from the RESET pins.

8.6 First steps after starting-up the control panel

8.6.1 Control panel with wired keypads

1. Set correct, individual addresses in the wired keypads.
2. Run the device identification function.

8.6.2 Control panel without wired keypads

1. Connect computer to alarm control panel.
2. Add wireless keypads in the PERFECTA SOFT program.
3. Run the device identification function.

9. Programming addresses for the hardwired keypads

An individual address from the 0 to 3 range must be set for each keypad. By default, address 0 is preset for all wired keypads.

Below, it is described how to program the address in the PRF-LCD keypads. The instructions for other wired keypads are described in their respective manuals.

9.1 Programming the address by means of the service function



The address programming function can be started from either a wired or wireless keypad, but it will only allow setting addresses in the wired keypads.

1. Start the service mode (see: “Starting the service mode” p. 12).
2. Press successively **2_{ABC}** **0** **☛** **#** **0** to run the 20.KPD.ADDRESS function.
3. Information on the current address and permissible address range will be displayed on all wired keypads (see Fig. 11).

The image shows a rectangular LCD display with a black background and white pixelated text. The text is arranged in two lines. The first line reads "This LCD address". The second line reads "(n: 0-3): _", where the underscore indicates a cursor or a blank space for input.

Fig. 11. Programming keypad address (n = current address).

4. On the keypad the address of which you want to change, press the key whose digit corresponds to the new address.
5. Press *** ☛** to finish the function (the function will be finished automatically after 2 minutes since it was launched). The keypad will be restarted.

9.2 Programming the address without entering the service mode

This way of address programming is useful when the keypad operation is blocked and starting the service mode is impossible.

1. Power off the keypad.
2. Disconnect wires from the keypad CLK and DTA terminals.
3. Short the CLK and DTA keypad terminals.
4. Power on the keypad.
5. Information on the current address and permissible address range will be displayed on the keypad (see: Fig. 11).
6. Press the key whose digit corresponds to the new address (if you make a mistake, press *** ☛** to restart the keypad – current address information will be displayed again).
7. Power off the keypad.
8. Open the CLK and DTA keypad terminals.
9. Connect wires properly to the CLK and DTA keypad terminals.
10. Power on the keypad.

10. Identifying devices

Devices connected to the communication bus and the communication connector (PERFECTA-RF) will not be properly supported, unless they have been identified by the control panel.

10.1 Identifying devices by means of the keypad

1. Start the service mode (see: “Starting the service mode” p. 12).
2. Press successively **2_{ABC}** **1** **#** **0** to run the 21.IDENTIFICAT. function.
3. “Please wait...” message will appear.

4. After devices connected to the communication bus and the communication connector are identified, information on the number of such devices will be displayed.



If information is displayed that there is a problem with a device with specific address, it means that a wrong address is set on the device (invalid for this type of device or the same address is set on at least two devices) or that the device is not supported.

5. Press  to quit the function.

10.2 Identifying devices by means of the PERFECTA SOFT program

1. Click the “Hardware” tab.
2. Click “Mainboard”.
3. Click “Detect connected modules”.
4. After devices connected to the communication bus and the communication connector are identified, information on the number of such devices will be displayed.



In the event of any problems with identification (e.g. an invalid address is set in the device), a message will be displayed to inform you about the problem.

5. Click “READ DATA FROM PANEL”.

11. Connecting the computer to the control panel

You can connect the control panel RS-232 (TTL) port with the computer USB port. To make the connection, use the USB-RS converter offered by SATEL. Having connected the computer to the control panel, you can:


- configure the alarm system in the PERFECTA SOFT program (communication is encrypted),
- update the control panel firmware.

12. Installing MICRA wireless devices

If you installed the PERFECTA-RF module on the control panel mainboard, you can install MICRA (433 MHz) wireless devices in the alarm system. You can do it after starting the control panel and identifying the devices used in conjunction with the control panel.

Before installing a wireless device, check if transmissions from the device positioned in the planned installation place reach the control panel. You can do it after you register the device to the control panel. To send a transmission, you can, for example, open the tamper switch on the device. If transmissions from the device in the expected place of installation do not reach the control panel, select another location. It may be sufficient to shift the device ten or twenty centimeters. Do not secure the device permanently until you make sure that the control panel receives transmissions from the device. For detailed information about installation of individual devices, please refer to the manuals of the respective products.

All MICRA wireless devices must be registered to the control panel. You can do it in the PERFECTA SOFT program or the LCD keypad. For instructions on how to register devices to the controller, please refer to the full manual.

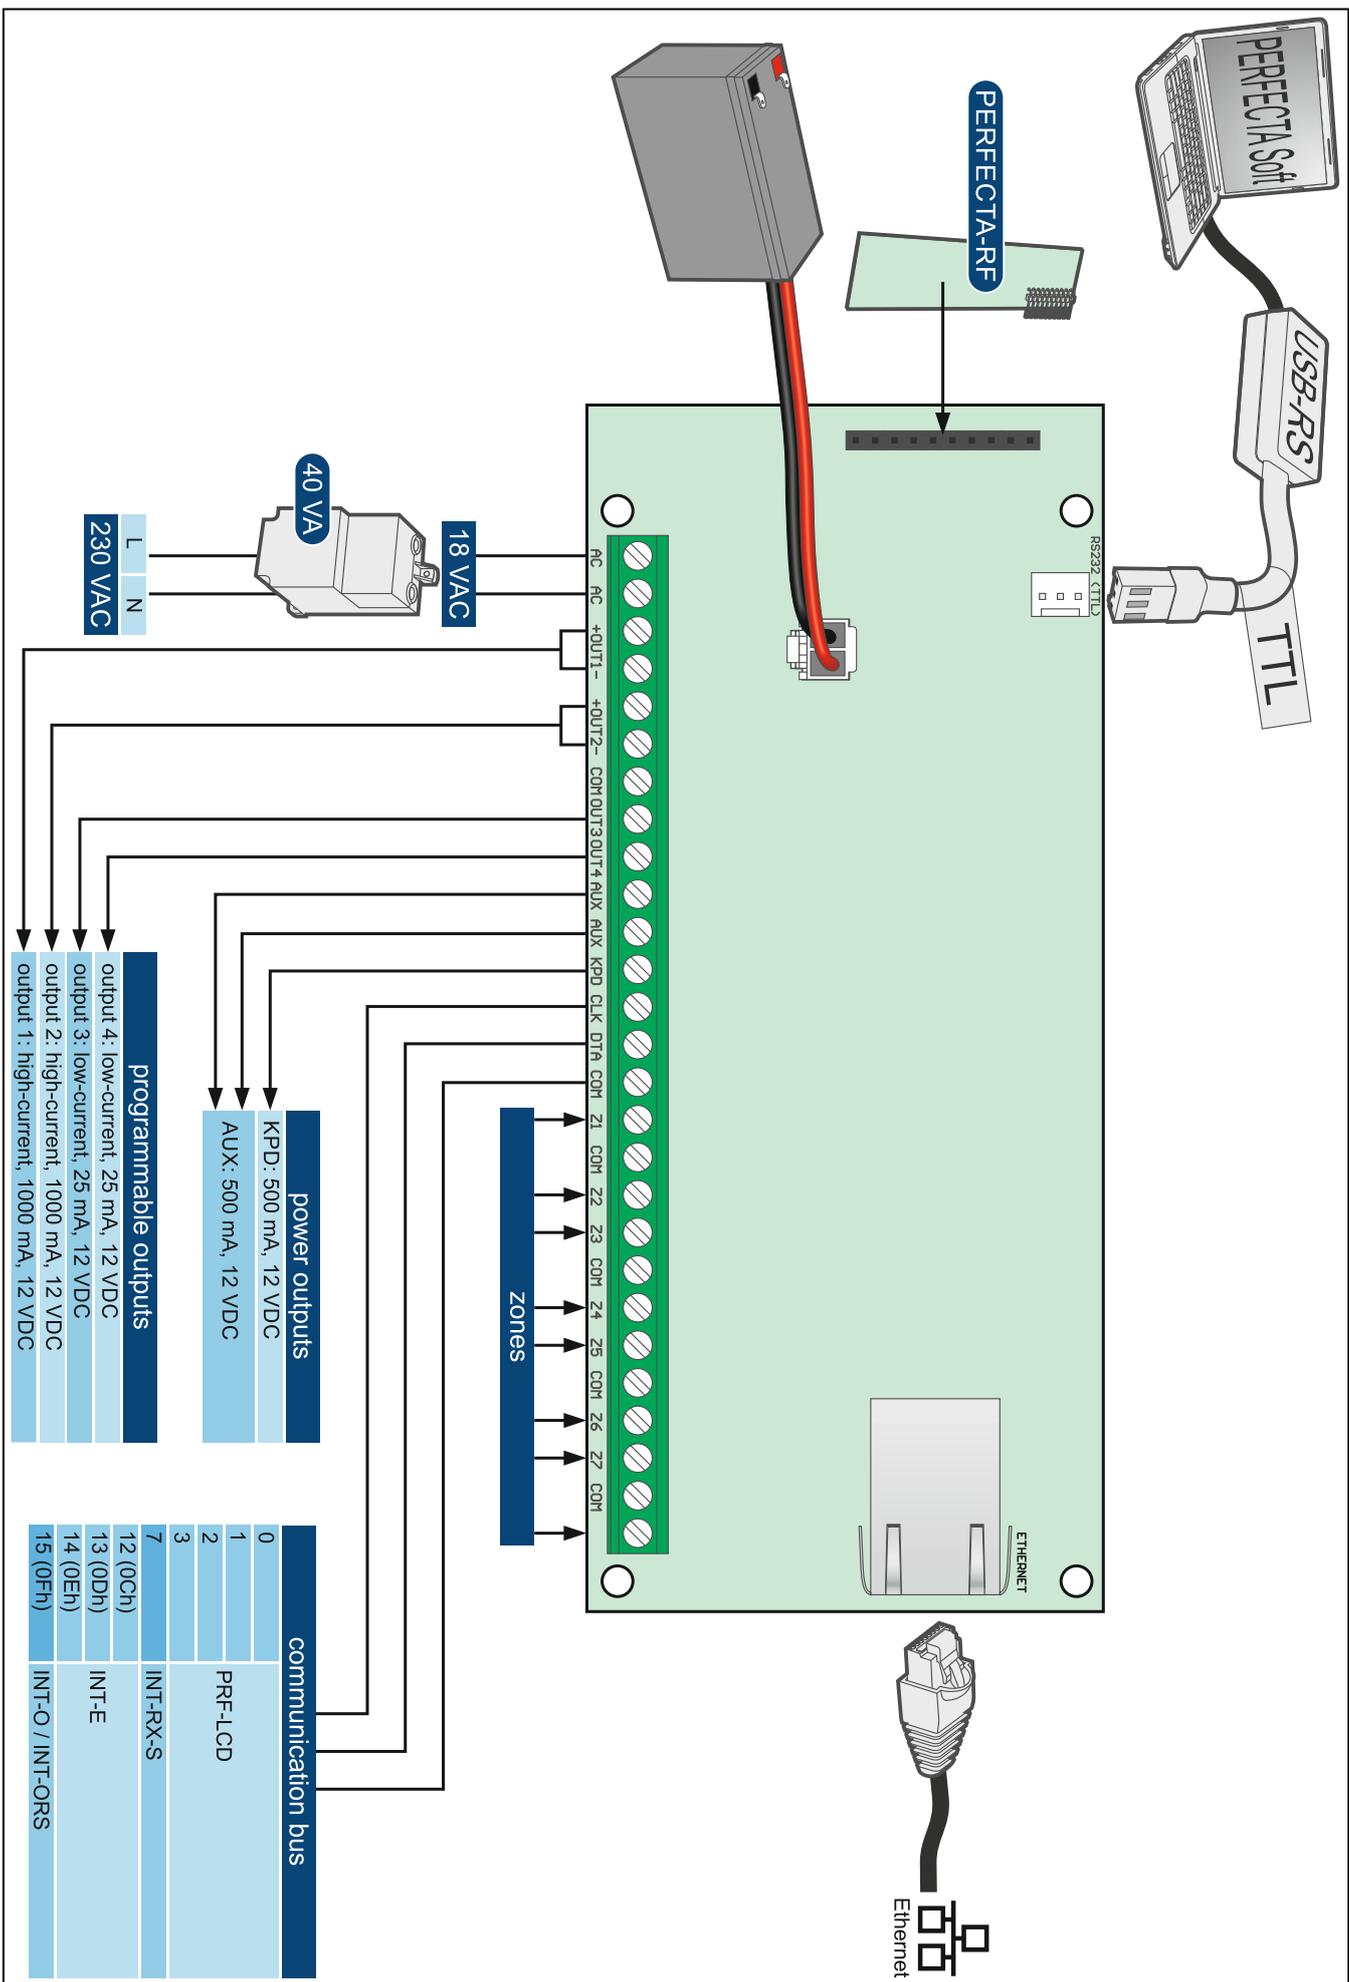

power outputs

KPD: 500 mA, 12 VDC
AUX: 500 mA, 12 VDC

programmable outputs

output 4: low-current, 25 mA, 12 VDC
output 3: low-current, 25 mA, 12 VDC
output 2: high-current, 1000 mA, 12 VDC
output 1: high-current, 1000 mA, 12 VDC

communication bus

0	PRF-LCD
1	
2	
3	INT-RX-S
7	
12 (0Ch)	INT-E
13 (0Dh)	
14 (0Eh)	INT-O / INT-ORS
15 (0Fh)	