


Wireless passive infrared detector with pet immunity up to 20 kg APD-200 Pet



Firmware version 1.00

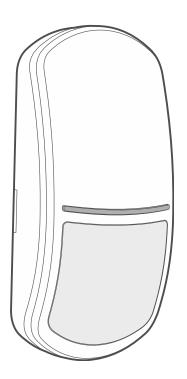

CE

apd-200_pet_en 02/23



SATEL sp. z o.o. • ul. Budowlanych 66 • 80-298 Gdańsk • POLAND tel. +48 58 320 94 00 www.satel.pl

IMPORTANT

The device should be installed by qualified personnel.

Prior to installation, please read carefully this manual.

Changes, modifications or repairs not authorized by the manufacturer shall void your rights under the warranty.

The rating plate of the device is located on the enclosure base.

(F The device meets the requirements of the applicable EU directives.

The device is designed for indoor installation.

The device must not be disposed of with other municipal waste. It should be disposed of in accordance with the existing rules for environment protection (the device was placed on the market after 13 August 2005).

The device meets the technical regulations of the Eurasian Customs Union.

SATEL aims to continually improve the quality of its products, which may result in changes in their technical specifications and software. Current information about the changes being introduced is available on our website.

Please visit us at: https://support.satel.pl

Hereby, SATEL sp. z o.o. declares that the radio equipment type APD-200 Pet is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.satel.pl/ce

In the EU, this radio equipment is only permitted to operate in the 868 MHz frequency band.

The following symbols may be used in this manual:

- *i* -
 - caution.

note,

EĦ

CONTENTS

1.	Features	2
2.	Specifications	2
3.	Description	
	Radio communication	
	Alarms	3
	Operating modes	3
	Energy saving mode (ECO)	3
	Test mode	3
	LEDs	4
	Supervision of motion detection system	4
	Battery status control	
	Electronics module	4
4.	Installation	4

The APD-200 Pet detector is used to detect motion in a protected area. It is designed for operation within the ABAX 2 / ABAX two-way wireless system. This manual applies to the detector with firmware version 1.00 (or newer), which is supported by:

- ABAX 2:
 - ACU-220 / ACU-280 controller,
 - ARU-200 repeater.
- ABAX:
 - ACU-120 / ACU-270 controller (firmware version 5.04 or newer),
 - ARU-100 repeater (firmware version 2.02 or newer),
 - INTEGRA 128-WRL control panel (firmware version 1.19 or newer and firmware version of processor used to operate ABAX system 3.10 or newer).

1. Features

- Motion detection with passive infrared sensor (PIR).
- Digital motion detection algorithm.
- Digital temperature compensation.
- Pet immunity up to 20 kg.
- Encrypted two-way radio communication in the 868 MHz / 915 MHz frequency band (AES standard for the ABAX 2 system).
- Transmission channel diversity 4 channels for automatic selection of the one that will enable transmission without interference with other signals in the 868 MHz / 915 MHz frequency band (ABAX 2 system only).
- Remote update of detector firmware (ABAX 2 system only).
- Remote configuration.
- Built-in temperature sensor (temperature measurement range from -10°C to +55°C).
- LED indicators.
- Supervision of motion detection system.
- "ECO" option for longer battery life (ABAX 2 system only).
- Battery status control.
- Tamper protection against enclosure opening and removal from mounting surface.

2. Specifications

ABAX 2

ACU-220	up to 2000 m
ACU-280	up to 1600 m
ABAX	
Battery	CR123A 3 V
Battery life expectancy	
Temperature measurement range	10°C+55°C
Temperature measurement accuracy	±1°C
Standby current consumption	

Maximum current consumption	
Detectable speed	0.33 m/s
Warm-up period	
Recommended installation height	
Coverage area	
Complied with standards	EN50131-1, EN50130-4, EN50130-5
Security grade according to EN50131-2-2	Grade 2
Environmental class according to EN50130-5	
Operating temperature range	-10°C+55°C
Maximum humidity	
Dimensions	
Weight	107 g

3. Description

Radio communication

The detector connects to the controller / control panel at regular time intervals to provide information about its state (periodical communication). Additional communication may take place as a result of alarm (see "Operating modes").

Alarms

The detector will report alarm:

- after detecting a motion in the protected area,
- after detecting a fault in the motion detection system,
- after opening the tamper switch (tamper alarm).

Operating modes

Active – information about tamper alarm and motion detection alarm is sent immediately.

Passive – only information about tamper alarm is sent immediately. This operating mode prolongs the battery life.

The detector operating mode is turned on remotely. If the detector is used in the INTEGRA / VERSA / PERFECTA 64 M alarm system, the operating mode may depend on the partition state (partition disarmed – passive mode; partition armed – active mode). For more information, refer to the ABAX 2 / ABAX controller manual / the INTEGRA 128-WRL control panel manual.

Energy saving mode (ECO)

If you want to prolong the battery life, you can enable in the detector the "ECO" option. When the "ECO" option is enabled, the periodical communication takes place every 3 minutes. Thus the battery life can be increased as much as fourfold. The option is only available in the ABAX 2 system. The detector with "ECO" option enabled meets requirements of the EN50131-2-2 standard for Grade 2.

Test mode

The test mode makes the detector testing easier, because the LED indicators are enabled. How to start and end the test mode is described in the ABAX 2 / ABAX controller manual / the INTEGRA 128-WRL control panel manual.

LEDs

The LEDs are flashing for about 35 seconds from inserting the battery, thus signaling the warm-up of the detector. The LEDs also work in the test mode, in which they indicates:

- periodical communication short flash (80 milliseconds),
- alarm ON for 2 seconds.

Supervision of motion detection system

When the motion detection system starts malfunctioning, the detector will report an alarm during periodical communication. The alarm will keep going until the fault is cleared (long violation).

Battery status control

When the battery voltage is below 2.75 V, information about low battery is sent during each transmission.



In response to the battery voltage drop below 2.75 V, sensitivity of the IR sensor in the detector is automatically lowered to eliminate false alarms.


Electronics module

Do not remove the plastic cover from the circuit board to prevent damage to the components located on the board.

Do not touch the pyroelectric sensor, so as not to soil it.

- (1) CR123A lithium battery.
- LED indicator.
- (3) element not used.
- 4) tamper switch activated by cover removal.
- (5) PIR sensor (quad element pyrosensor).

On the other side of the electronics module is a tamper switch activated by removing the detector from the wall.

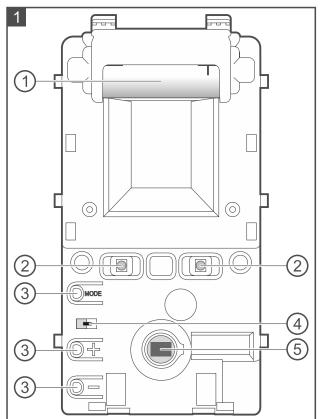

4. Installation

There is a danger of battery explosion when using a different battery than recommended by the manufacturer, or handling the battery improperly. Do not crush the battery, cut it or expose it to high temperatures (throw it into the fire, put it in the oven, etc.).


Do not expose the battery to very low pressure due to the risk of battery explosion or leakage of flammable liquid or gas.

4

Be particularly careful during installation and replacement of the battery. The manufacturer is not liable for the consequences of incorrect installation of the battery.

The used batteries must not be discarded, but should be disposed of in accordance with the existing rules for environment protection.

If the detector is to be pet immune, it must not be mounted on the bracket and must be installed at a height of 2.4 m with no inclination from the vertical.

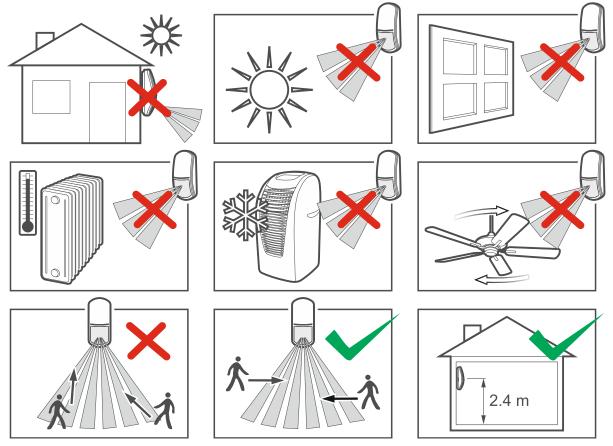

- 1. Remove the front cover (Fig. 2).
- 2. Move the electronics module down to unlock it, and then remove it from the enclosure base (Fig. 3).
- 3. Install the battery and add the detector to the wireless system (see the ABAX 2 / ABAX controller manual or the INTEGRA 128-WRL control panel installer manual). The sticker with serial number which shall be entered when registering the detector in the system can be found on the electronics module.

i

In the INTEGRA / VERSA alarm system, the detector is identified as APD-100.


Simultaneous operation of the detector by the ABAX 2 and ABAX controller / INTEGRA 128-WRL alarm control panel is not possible.

- 4. Place the electronics module in the enclosure base and then move it up to lock it.
- 5. Replace the cover.
- 6. Put the detector at the place of its future installation.
- 7. Check the level of signal received from the detector by the ABAX 2 / ABAX controller or the INTEGRA 128-WRL control panel. If the signal level is lower than 40%, select another

place for installation. Sometimes, it is sufficient to shift the device ten or twenty centimeters.

i

The ARF-200 tester makes it possible to check the radio signal strength at the place of future installation without having to put the detector there.

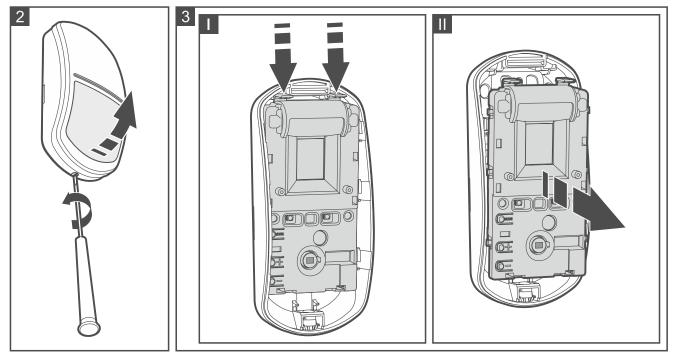

- 8. Remove the front cover (Fig. 2) and remove the electronics module (Fig. 3).
- 9. Make screw holes in the enclosure base.
- 10. Secure the enclosure base to the wall (Fig. 4). The wall plugs (anchors) delivered with the device are intended for concrete, brick, etc. For other types of surface (drywall, styrofoam), use the appropriately selected wall plugs.
- 11. Fasten the electronics module in the enclosure.
- 12. Replace the cover.
- 13. Configure the detector settings (sensitivity of PIR sensor, etc. see the ABAX 2 / ABAX controller manual / the INTEGRA 128-WRL control panel manual).
- i

The pet immunity option is available for the detector in the ABAX system, but disabling the option in no way affects performance of the detector.

- 14. Start the test mode (see the ABAX 2 / ABAX controller manual / the INTEGRA 128-WRL control panel manual).
- 15. Check whether moving around within the detector coverage area will get the LEDs to come on. Fig. 5 shows the maximum detection range of a detector placed at a height of 2.4 m.
- 1

If pet movement is sensed by the detector, reduce sensitivity of the PIR sensor (see the ABAX 2 / ABAX controller manual / the INTEGRA 128-WRL control panel manual).

16. End the test mode.

